

Hi-Pot Tester meter fixture and function selections

| Fixture | Model | DU-331 | DU-332 | DU-333 | DU-3315 | DU-3316 |
|-----------|----------------------------------|--------|--------|--------|---------|---------|
| Fx33-0101 | HV test lead wires | √ | √ | √ | √ | √ |
| Fx33-0102 | HV test lead wires | √ | √ | √ | √ | √ |
| Fx33-0201 | HV test lead box | √ | √ | √ | √ | √ |
| Fx33-0301 | HV test bat | √ | √ | √ | √ | √ |
| Fx33-0302 | HV test bat | √ | √ | √ | √ | √ |
| Fx33-0601 | ARC Fixture | √ | √ | √ | √ | √ |
| Of33-IR00 | Insulation Resistance Test | | √ | √ | | √ |
| Of33-CC00 | Check return line contact device | | | | √ | √ |
| Cr33-RS00 | RS-232 interface | √ | √ | √ | √ | √ |
| Cr33-SC00 | Scan interface | | | √ | | |



Fx33-0101



Fx33-0102



Fx33-0301



Fx33-0302



Fx33-0201



Fx33-0601



Cr33-RS00

Leakage current meter fixture and function selections

| Fixture | Model | DU-2310 | DU-2311 |
|-----------|-------------------------|---------|---------|
| Fx23-0101 | Test Clips (Red) | √ | √ |
| Fx23-0102 | Test Clips (Black) | √ | √ |
| Fx23-0201 | Double-Sided Test Box | √ | √ |
| Fx23-0401 | Trilateral Test Fixture | √ | √ |
| Cr23-RS00 | RS-232 Interface | √ | √ |
| Cr23-PR00 | Printer Interface | √ | √ |
| Cr23-GP00 | GP-IB Interface | √ | √ |



Fx23-0101



Fx23-0102



Fx23-0201



Fx23-0401



Cr23-RS00



Cr23-PR00



Cr23-GP00

LCR Meter test meter fixture and function selections

| Fixture | Model | DU-6010 | DU-6011 | DU-6100 | DU-6115 | DU-6021 | DU-6022 |
|-----------|--------------------------------|---------|---------|---------|---------|---------|---------|
| Fx60-0101 | LCR Test Clips | √ | √ | √ | √ | √ | √ |
| Fx60-0102 | SMD Test Tweezers | √ | √ | √ | √ | √ | √ |
| Fx60-0103 | High Frequency Test Cable | √ | √ | √ | √ | √ | √ |
| Fx60-0201 | Double-Sided Test Box | √ | √ | √ | √ | √ | √ |
| Fx60-0202 | SMD Test box | √ | √ | √ | √ | √ | √ |
| Fx60-0203 | One-sided Test box | √ | √ | √ | √ | √ | √ |
| Fx60-0301 | SMD test bat | √ | √ | √ | √ | √ | √ |
| Cr60-RS00 | RS-232 interface | √ | √ | | | √ | √ |
| Cr60-HD00 | Handler interface | √ | √ | | | √ | √ |
| Cr60-GP00 | GP-IB interface | √ | √ | | | √ | √ |
| Cr60-PR00 | Printer interface | √ | √ | | | √ | √ |
| Of60-ME00 | 100 sets of memory | √ | √ | | | √ | √ |
| Of60-LS00 | Multi-frequency scanning board | √ | √ | | | √ | √ |
| Of60-JU00 | Judgement comparato | √ | √ | √ | √ | √ | √ |
| Of60-BN00 | Sorting comparator | √ | √ | | | √ | √ |



Fx60-0101



Fx60-0102



Fx60-0103



Fx60-0201



Fx60-0202



Fx60-0203



Fx60-0301



Cr60-RS00



Cr60-HD00



Cr60-PR00



Cr60-GP00



Auto. Transformer Testing Meter fixture and function selections

| Fixture | Model | DU-7010 | DU-7011 | DU-7012 |
|-----------|-----------------------------------|---------|---------|---------|
| Fx60-0101 | LCR Test Clips | √ | √ | √ |
| Fx70-0101 | Turn Ratio Test clips | √ | √ | √ |
| Fx20-0501 | Foot control switch | | √ | √ |
| Fx70-xxxx | Fixture | | √ | |
| Fx70-0601 | Connector cable | | | √ |
| Fx70-ES20 | 20pins extendable scanning board | | | √ |
| Cr70-RS01 | RS-232 interface | √ | √ | √ |
| Cr70-HD01 | Handler interface | √ | √ | √ |
| Cr70-GP01 | GPIB interface | √ | √ | √ |
| Cr70-PR01 | Printer interface | √ | √ | √ |
| Cr70-ME01 | 100 sets of memory | √ | √ | √ |
| Of70-DC01 | 1A Bias current | √ | √ | √ |
| Of70-BN10 | 10 points of sorting comparator | √ | | |
| Of70-DS20 | 20 points of bias inductance test | √ | | |



Fx60-0101



7001



Fx70-xxxx (5~7mm)



Fx70-0101



Fx70-ES20



Cr70-RS01



Cr70-HD01



Cr70-PR01



Cr70-GP01

Low-Ohm Meter fixture and function selections

| Fixture | Model | DU-5010 | DU-5011 |
|-----------|---------------------------|---------|---------|
| Fx60-0101 | LCR Test Clips | √ | √ |
| Fx60-0102 | SMD Test Tweezers | √ | √ |
| Fx60-0103 | High Frequency Test Cable | √ | √ |
| Fx60-0201 | Double-Sided Test Box | √ | √ |
| Fx60-0202 | SMD Test box | √ | √ |
| Fx60-0203 | One-sided Test box | √ | √ |
| Fx60-0301 | SMD test bat | √ | √ |
| Cr50-RS00 | RS-232 interface | √ | √ |
| Cr50-HD00 | Handler interface | √ | √ |
| Cr50-GP00 | GPIB interface | √ | √ |
| Cr50-PR00 | Printer interface | √ | √ |
| Of50-ME00 | 100 sets of memory | √ | √ |
| Of50-JU00 | Judgement comparator | √ | √ |



Fx60-0201



Fx60-0202



Fx60-0203



Fx60-0301



Fx60-0101



Fx60-0102



Fx60-0103



Cr50-RS00



Cr50-HD00



Cr50-PR00



Cr50-GP00

DC Bias Current Source meter fixture and function selects

| Fixture | DU-2020 | DU-2030 | DU-2040 | DU-2060 | DU-2090 | DU-20120 | DU-2110 | DU-2120 |
|-----------|--|---------|---------|---------|---------|----------|---------|---------|
| Fx20-0101 | Test Clips | √ | √ | √ | √ | √ | √ | √ |
| Fx20-0501 | Foot Switch | √ | √ | √ | √ | √ | √ | √ |
| Fx20-0601 | LCR meter connecting cable | √ | √ | √ | √ | √ | √ | √ |
| Of20-ME00 | 50 sets of memory | | | | | | √ | √ |
| Cr20-RS00 | RS-232 Interface | | | | | | √ | √ |
| Cr20-DS20 | LCR Meter (DU602x) Scan test Control interface | | | | | | √ | √ |



Fx20-0101



Fx20-0501



Fx20-0601



Cr20-RS00

High Extendable Programmable L.C.R.Z. Meter